


半田面 SOLDER SIDE	端子番号 Pin No.	部品面 PARTS SIDE
GND	A 1	GND
GND	B 2	GND
+5V	C 3	+5V
+5V	D 4	+5V
-5V	E 5	-5V
+12V	F 6	+12V
誤挿入防止キー	H 7	誤挿入防止キー
COIN COUNTER 2	J 8	COIN COUNTER 1
N. C.	K 9	N. C.
SP (-)	L 10	SP (+)
N. C.	M 11	N. C.
VIDEO GREEN	N 12	VIDEO RED
VIDEO SYNC	P 13	VIDEO BLUE
SERVICE SW	R 14	VIDEO GND
N. C.	S 15	N. C.
COIN SW 2	T 16	COIN SW 1
START SW 2	U 17	START SW 1
2P CONTROL UP	V 18	1P CONTROL UP
2P CONTROL DOWN	W 19	1P CONTROL DOWN
2P CONTROL LEFT	X 20	1P CONTROL LEFT
2P CONTROL RIGHT	Y 21	1P CONTROL RIGHT
2P CONTROL PUSH 1	Z 22	1P CONTROL PUSH 1
2P CONTROL PUSH 2	a 23	1P CONTROL PUSH 2
N. C.	b 24	N. C.
N. C.	c 25	N. C.
N. C.	d 26	N. C.
GND	e 27	GND
GND	f 28	GND

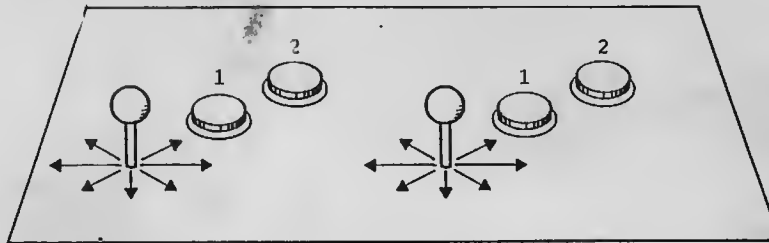

SKY SMASHER is a simultaneous two player game in a Vertical Screen. One 8-way joystick and 2 buttons for each palyer.

How to play:

1. Use joystick for player control.
2. Use push 1 for shooting.
3. Use push 2 for firing missile.



Destruction power up (LEVEL 1~4)



Increase in number of missile

Insert extra coins to continue game.

NIHON SYSTEM INC.

VONURU KICHIJOJI BUILDING
1-2-3 KICHIJOJI-HIGASHICHO
MUSASHINO-SHI, TOKYO 180
TEL:0422-21-3210 FAX:0422-21-3483

SKY SMASHER DIP SWITCH SETTING 1

DIPSW-1				1	2	3	4	5	6	7	8
COIN MODE SELECT (コインモード・セレクト)				COIN MODE 1 (モード1)	OFF						
				COIN MODE 2 (モード2)	ON						
COIN MODE	MODE 1 (モード1)	1 COIN 1 CREDIT		OFF	OFF	OFF	OFF	OFF			
		2 コイン 1 クレジット		↑	ON	OFF	OFF	OFF			
		3 " 1 "			OFF	ON	OFF	OFF			
		4 " 1 "			ON	ON	OFF	OFF			
		5 " 1 "			OFF	OFF	ON	OFF			
		6 " 1 "			ON	OFF	ON	OFF			
		1 " 2 "			OFF	ON	ON	OFF			
		1 " 3 "			ON	ON	ON	OFF			
		1 " 4 "			OFF	OFF	OFF	ON			
		1 " 5 "			ON	OFF	OFF	ON			
		1 " 6 "			OFF	ON	OFF	ON			
		2 " 3 "			ON	ON	OFF	ON			
		3 " 2 "			OFF	OFF	ON	ON			
		5 " 3 "			ON	OFF	ON	ON			
		8 " 3 "		↓	OFF	ON	ON	ON			
		FREE PLAY (フリープレイ)		OFF	ON	ON	ON	ON			
	MODE 2 (モード2)	COIN A (コインA)	1 COIN 1 CREDIT		ON	OFF	OFF				
			2 コイン 1 クレジット		↑	ON	OFF				
			3 " 1 "			OFF	ON				
		COIN B (コインB)	5 " 1 "			ON	ON				
			1 " 2 "					OFF	OFF		
			1 " 3 "					ON	OFF		
			1 " 5 "		↓			OFF	ON		
			1 " 6 "		ON			ON	ON		
STARTING COIN (スタート時コイン数)		NORMAL (ノーマル)						OFF			
		x 2 (2倍)						ON			
NOT IN USE											

DIP SWITCH SETTING 2

DIPSW-2		1	2	3	4	5	6	7	8
No. of LIVES (持ち数)	3	OFF	OFF						
	2	ON	OFF						
	5	OFF	ON						
	∞	ON	ON						
EXTEND PLAY (エクステンドプレイ)	120000, EVERY +200000			OFF	OFF				
	200000, EVERY +200000			ON	OFF				
	250000, EVERY +250000			OFF	ON				
	200000, NO EXTENDED			ON	ON				
DIFFICULTY (難易度)	1(NORMAL) (ノーマル)					OFF	OFF		
	2(HARD) (やや難)					ON	OFF		
	3(HARDEST) (難)					OFF	ON		
	4(EASY) (易)					ON	ON		
CONTINUE PLAY (コンティニュープレイ)	YES							OFF	
	NO							ON	
DEMO SOUND (デモ・サウンド)	YES								OFF
	NO								ON

AT POWER ON, IF YOU TOUCH THE JOYSTICK OR SHOOT OR MISSILE BUTTON, YOU WILL HAVE DIP-SW SETTING ON THE SCREEN.